

# (EN) Congratulations on Digital Tyre Gauge!

If your tyres are appropriately inflated, your fuel mileage will increase between 3-4% benefitting the environment and your pocket.

## Operating instructions:

---

To use, simply push the nozzle onto the tyre valve. Make sure a good seal is made between the nozzles; there should be no hissing sound of escaping air. Then hold the gauge on the valve until the reading locks on the display. Promptly remove the gauge from the valve stem and read the pressure displayed which will be displayed for around 12 seconds. The gauge will then turn off automatically. You may continue to use the gauge even though the previous reading is still displayed. The scale can be changed by repressing the on-button until the required scale is shown.

There is also a tyre depth gauge. It is important that you check the depth of your tyres regularly to ensure safe driving. Simply locate the area on the tyre with the most wear, then press the gauge against the tyre and extend the gauge pin into the tyre. If the reading is red it is recommended that you change your tyre immediately.

## Changing the batteries:

---

To change the batteries, unscrew the gauge nozzle, remove the rubber grip and unscrew the 5 screws located on the back. It is then possible to change the batteries. The environment should be considered when disposing of batteries, don't throw batteries in a dustbin.

## Specifications:

---

Range: 5-100 PSI or 0.5-7 Bar

Accuracy: + / - 1%

Operating temperature: 0-38°C

Great for: SUVs/Trucks, Motorcycles, Automobiles

Lifetime: 2 years or 10.000 times

## Helpful hints:

---

- After removing the gauge from the valve stem, the displayed result may change because the gauge has been recalibrated. The final result is more accurate.
- If you observe "LO" on the display, the power supply has been depleted
- If you observe an unusually low reading, make sure no sound of escaping air is heard. Also make sure you remove the gauge from the valve stem after the reading locks on the display
- If you observe an unusually high reading, make sure you are checking the pressure of a cool tyre. You can measure the tyre pressure again after a while and will get the accurate reading.
- If the tyre pressure is too high in any of the tyres, slowly release air by gently pressing on the tyre valve with the edge of the tyre gauge
- To clean the gauge, use a soft damp cloth. Do not immerse in or spray with water or other liquid cleaner.